


Titering Antibodies

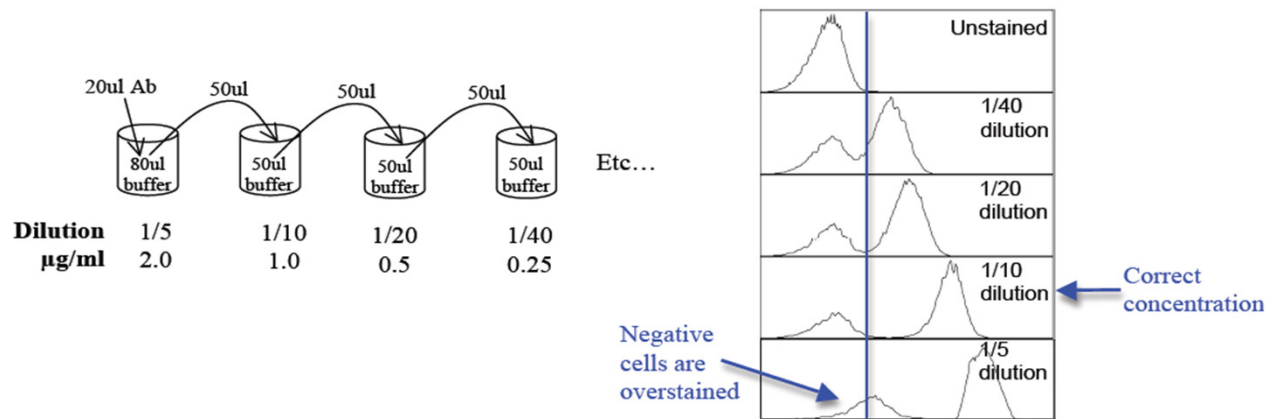

- Make serial dilutions of antibody in flow buffer
- Maintain the same volume in each tube
- Add cells to each dilution tube and a tube containing only buffer for an unstained cell control
- Analyze on flow cytometer
- Analyze data to determine best dilution for maximum signal:noise